

Mimosa Operating Instructions



ATHENA'S
HOME NOVELTIES

SKU 3428


Indulge in sweet, sensuous waves of pleasure as the Mimosa flickers against your most sensual spots. This vibrant orange mini massager gives you full control over the 10 super-charged functions including a Power Boost. The plush silicone and flexible flickering tip boast rows of ridges to pop the cork of pleasure. Get your juices flowing in the morning or wind down after a long day with a Mimosa in the tub! It's waterproof. USB charging cable included.

Features :

- USB Rechargeable (cord included) with self-sealing charging port.
- Silicone with ABS Plastic metallic detail
- Not for use with silicone lubricants
- Power boost for maximum vibration
- Memory chip resumes on last function used
- Security travel lock
- Phthalate free
- Waterproof
- Whisper quiet

Length: 3.25 inches
Width: 1.5 inches

Charge time: 2.5 hours
Run time high speeds: 40 minutes
Run time low speeds: 1.5 hours

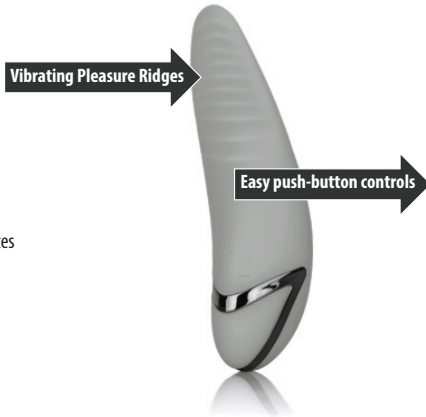


Operating

Security Lock: Press the power button (top) for 3 seconds to disengage the security lock. Press for 3 seconds for OFF and to engage the security lock. The button will glow when ON. Memory Chip will resume last function used.

Vibration and Pulsation: Tap the (middle) button to turn on and cycle through the other 9 functions. Hold button down for 3 seconds to turn off functions.

Power Boost: Tap the (bottom) button to initiate the power boost. Tap to turn off.

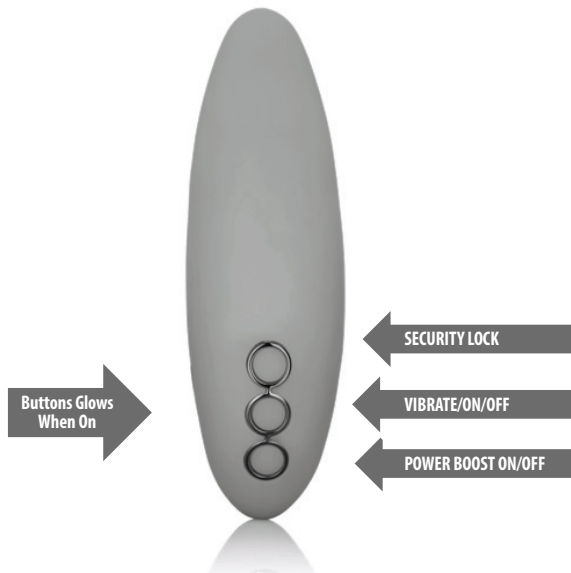

Cleaning and storage

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)
Store in a cool dry location.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog. Do not use this vibe with silicone lubricants.

Follow these simple steps to help extend the life cycle of your items

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching. Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

Warranty

All sales are final due to the intimate nature of our products. Motorized products are guaranteed for 30 days for a replacement. No refunds will be given. If you receive a broken product, or if your product breaks within 30 days of receipt, please contact your distributor, if purchased at a party, or our Customer Care Liaison if purchased on our website, for instructions on how to send back your item for a replacement. All defective product returns must be accompanied by a pre-authorization number.

Our Customer Care Liaison can be reached by calling (877) ATHENAS or via email at E-mail: customerservice@athenashn.com



ATHENA'S
HOME NOVELTIES
www.athenashn.com

May ©2019 Athena's Home Novelties, Inc.
640 Winter Street, Woonsocket, RI 02895 1-877-ATHENAS

Charging

Charge fully prior to first use. Connect the USB cable to the USB port of your computer or other power source and connect the other end to the toys charging port.

LED light will flash while charging and glow solid when fully charged. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

Self-sealing charging port for waterproof play integrity.

Rechargeable: USB charge cord included

Complete charge: 2 hours

Run time high speed: 1.5 hours

Run time low speed: 2 hours

