

The Wanderer Operating Instructions



ATHENA'S
HOME NOVELTIES

SKU 3432

Experience the power of a big wand massager in a petite, lightweight wand. Where ever you may wander, this stylish wand will keep you coming and going! It is waterproof, submersible and STRONG with 7 modes of vibration. Apply your favorite massage oil, relax and let the Wanderer travel to all your sore, tired muscles. Feel the tension melt away. And speaking of tension, the Wanderer can travel south to take you to new orgasmic heights! The flexible head with a tapered tip moves with your body as you target and massage internal and external hot spots for more explosive orgasms! Not all who wander are lost!

Features :

- Total length: 8.7 inches
- Insertable length: 5.0 inches
- Width: 1.75 inches at widest point
- Waterproof
- Rechargeable: USB charge cord included
- Made from smooth silicone
- Not for use with silicone lubricants
- Phthalate free and latex free

Charge time: 80 minutes
Run time high speeds: 55 minutes
Run time low speeds: 100 minutes

7 Powerful
Speeds at Base


Flexible Neck



Operating

ON/OFF: Tap the On/Off button to start and initiate the 1st speed, press for 3 seconds to stop. The button will glow when On. Continue to tap the button to adjust speed and tempo of the toy.

Vibration and Pulsation: Tap the On/Off for the 6 additional settings of vibration. Each press will cycle to the next vibration level of intensity.

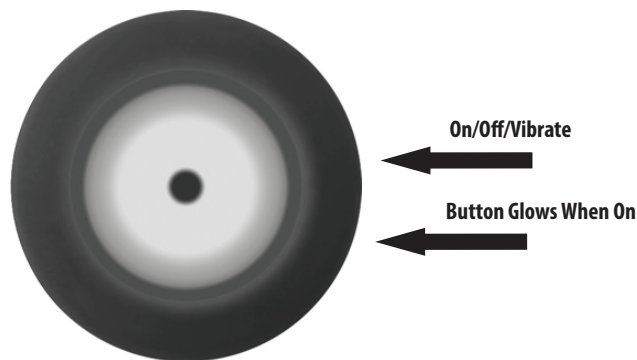

Cleaning

Clean before and after use. Dry completely. For best results we recommend using Athena's (antibacterial) Mighty Tidy Toy Cleaner (SKU MTT-1235 4 oz. or SKU MTT-2762 8 oz.)

Store in a cool dry location.

Lubrication

Be sure to use ample lubrication with your bedroom toys. For great results try Athena's Perfectly Pure Intimate Moisturizer (SKU 5701). You can find additional lubrication options on our web site or in our catalog. Do not use this vibe with silicone lubricants.

Follow these simple steps to help extend the life cycle of your items

Do not store products near extreme cold or heat.

Do not store your adult toys in a manner where they are touching.

Keep them separated to avoid melting or discoloring.

Do not place lotion bottles or adult novelties directly on furniture surfaces. Place them on a cloth to protect your toys and the finish on your furniture.

Warranty

All sales are final due to the intimate nature of our products. Motorized products are guaranteed for 30 days for a replacement. No refunds will be given. If you receive a broken product, or if your product breaks within 30 days of receipt, please contact your distributor, if purchased at a party, or our Customer Care Liaison if purchased on our website, for instructions on how to send back your item for a replacement. All defective product returns must be accompanied by a pre-authorization number.

Our Customer Care Liaison can be reached by calling (877) ATHENAS or via email at E-mail: customerservice@athenashn.com



ATHENA'S
HOME NOVELTIES
www.athenashn.com

May ©2019 Athena's Home Novelties, Inc.
640 Winter Street, Woonsocket, RI 02895 1-877-ATHENAS

Charging

Charging

Comes partially charged. Charge upon opening. Connect the USB cable to the USB port of your computer or other power source and connect to the other end to the toys charging port.

The LED light will blink when charging and become solid when fully charged. Vibrations slow as charge is depleted. There is no danger of battery damage by overcharging, but we recommend to not over charge for long periods of time.

Charge time: 80 minutes
Run time high speeds: 55 minutes
Run time low speeds: 100 minutes

Input for Charge

